How to Install the RAIDDrive™ Driver

The following slides will explain how to:


1. Uninstall the existing driver
2. Install the new driver
3. Verify the new driver

1. Uninstall the old driver


1-1. Click START button



1-2. Right Click 'Computer' and Select 'Manage'

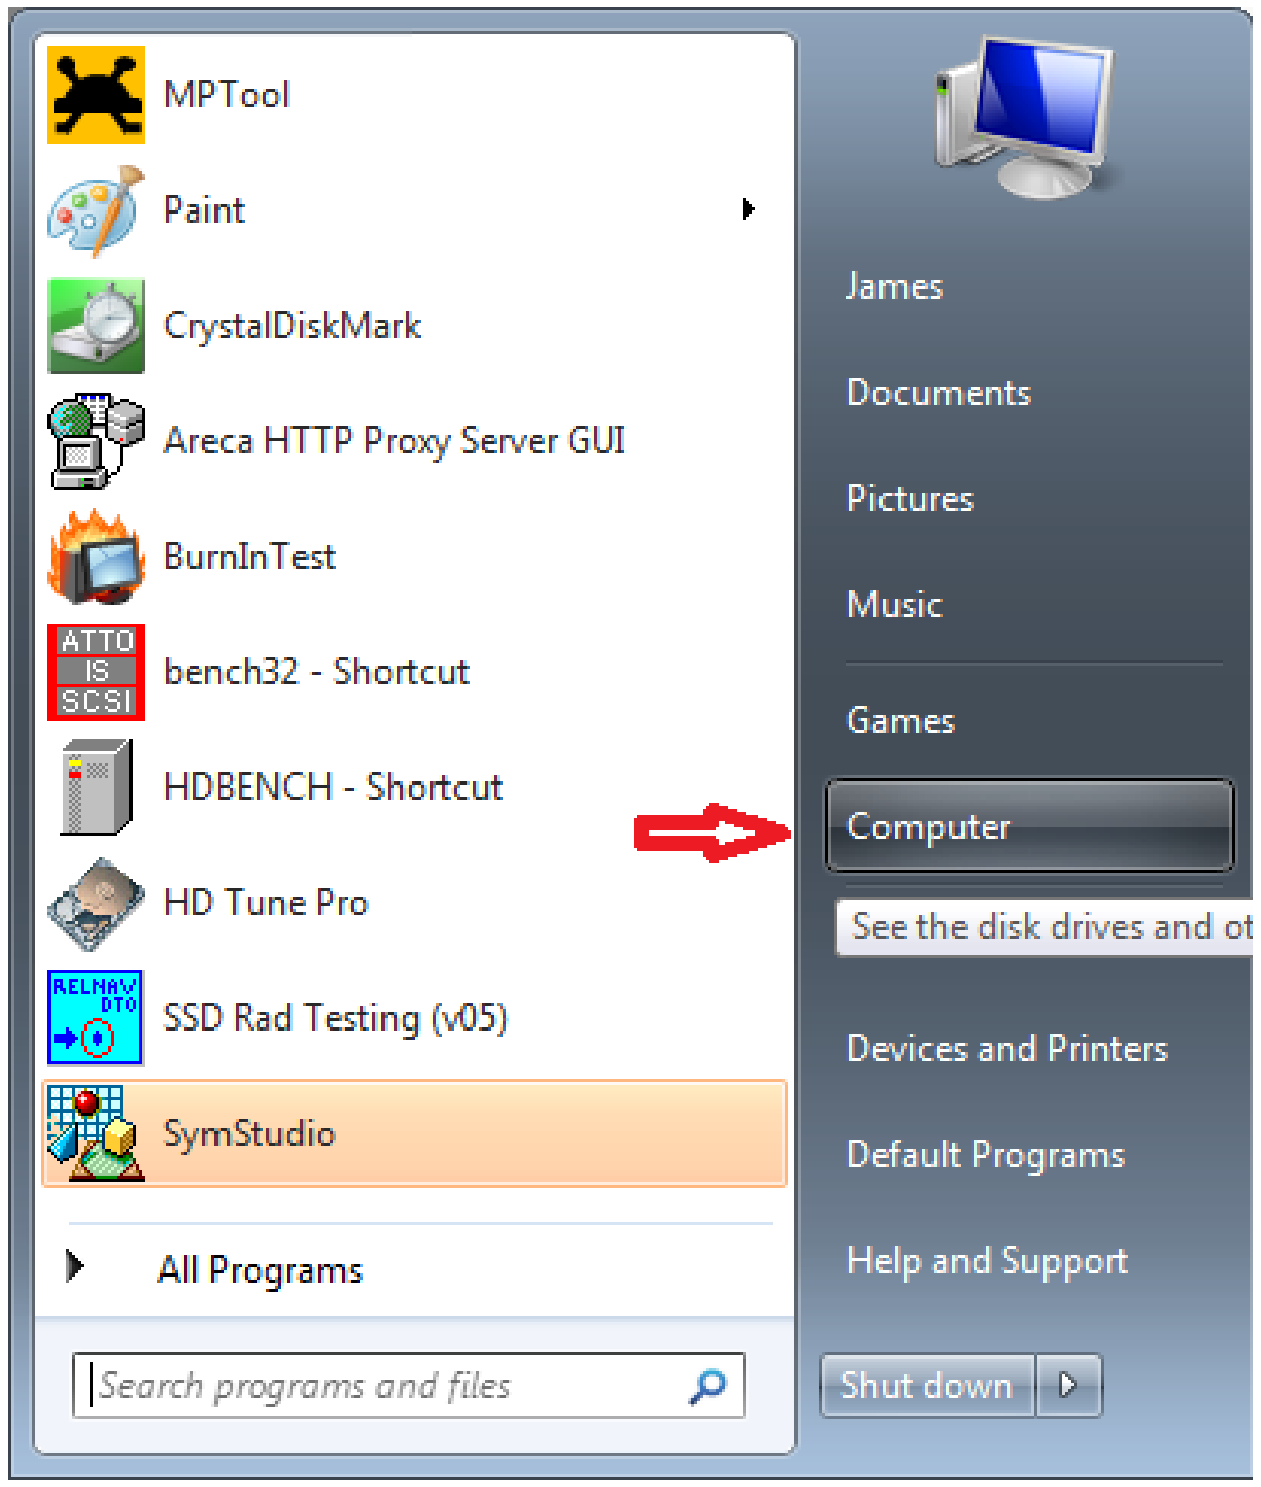

1. Uninstall the old driver

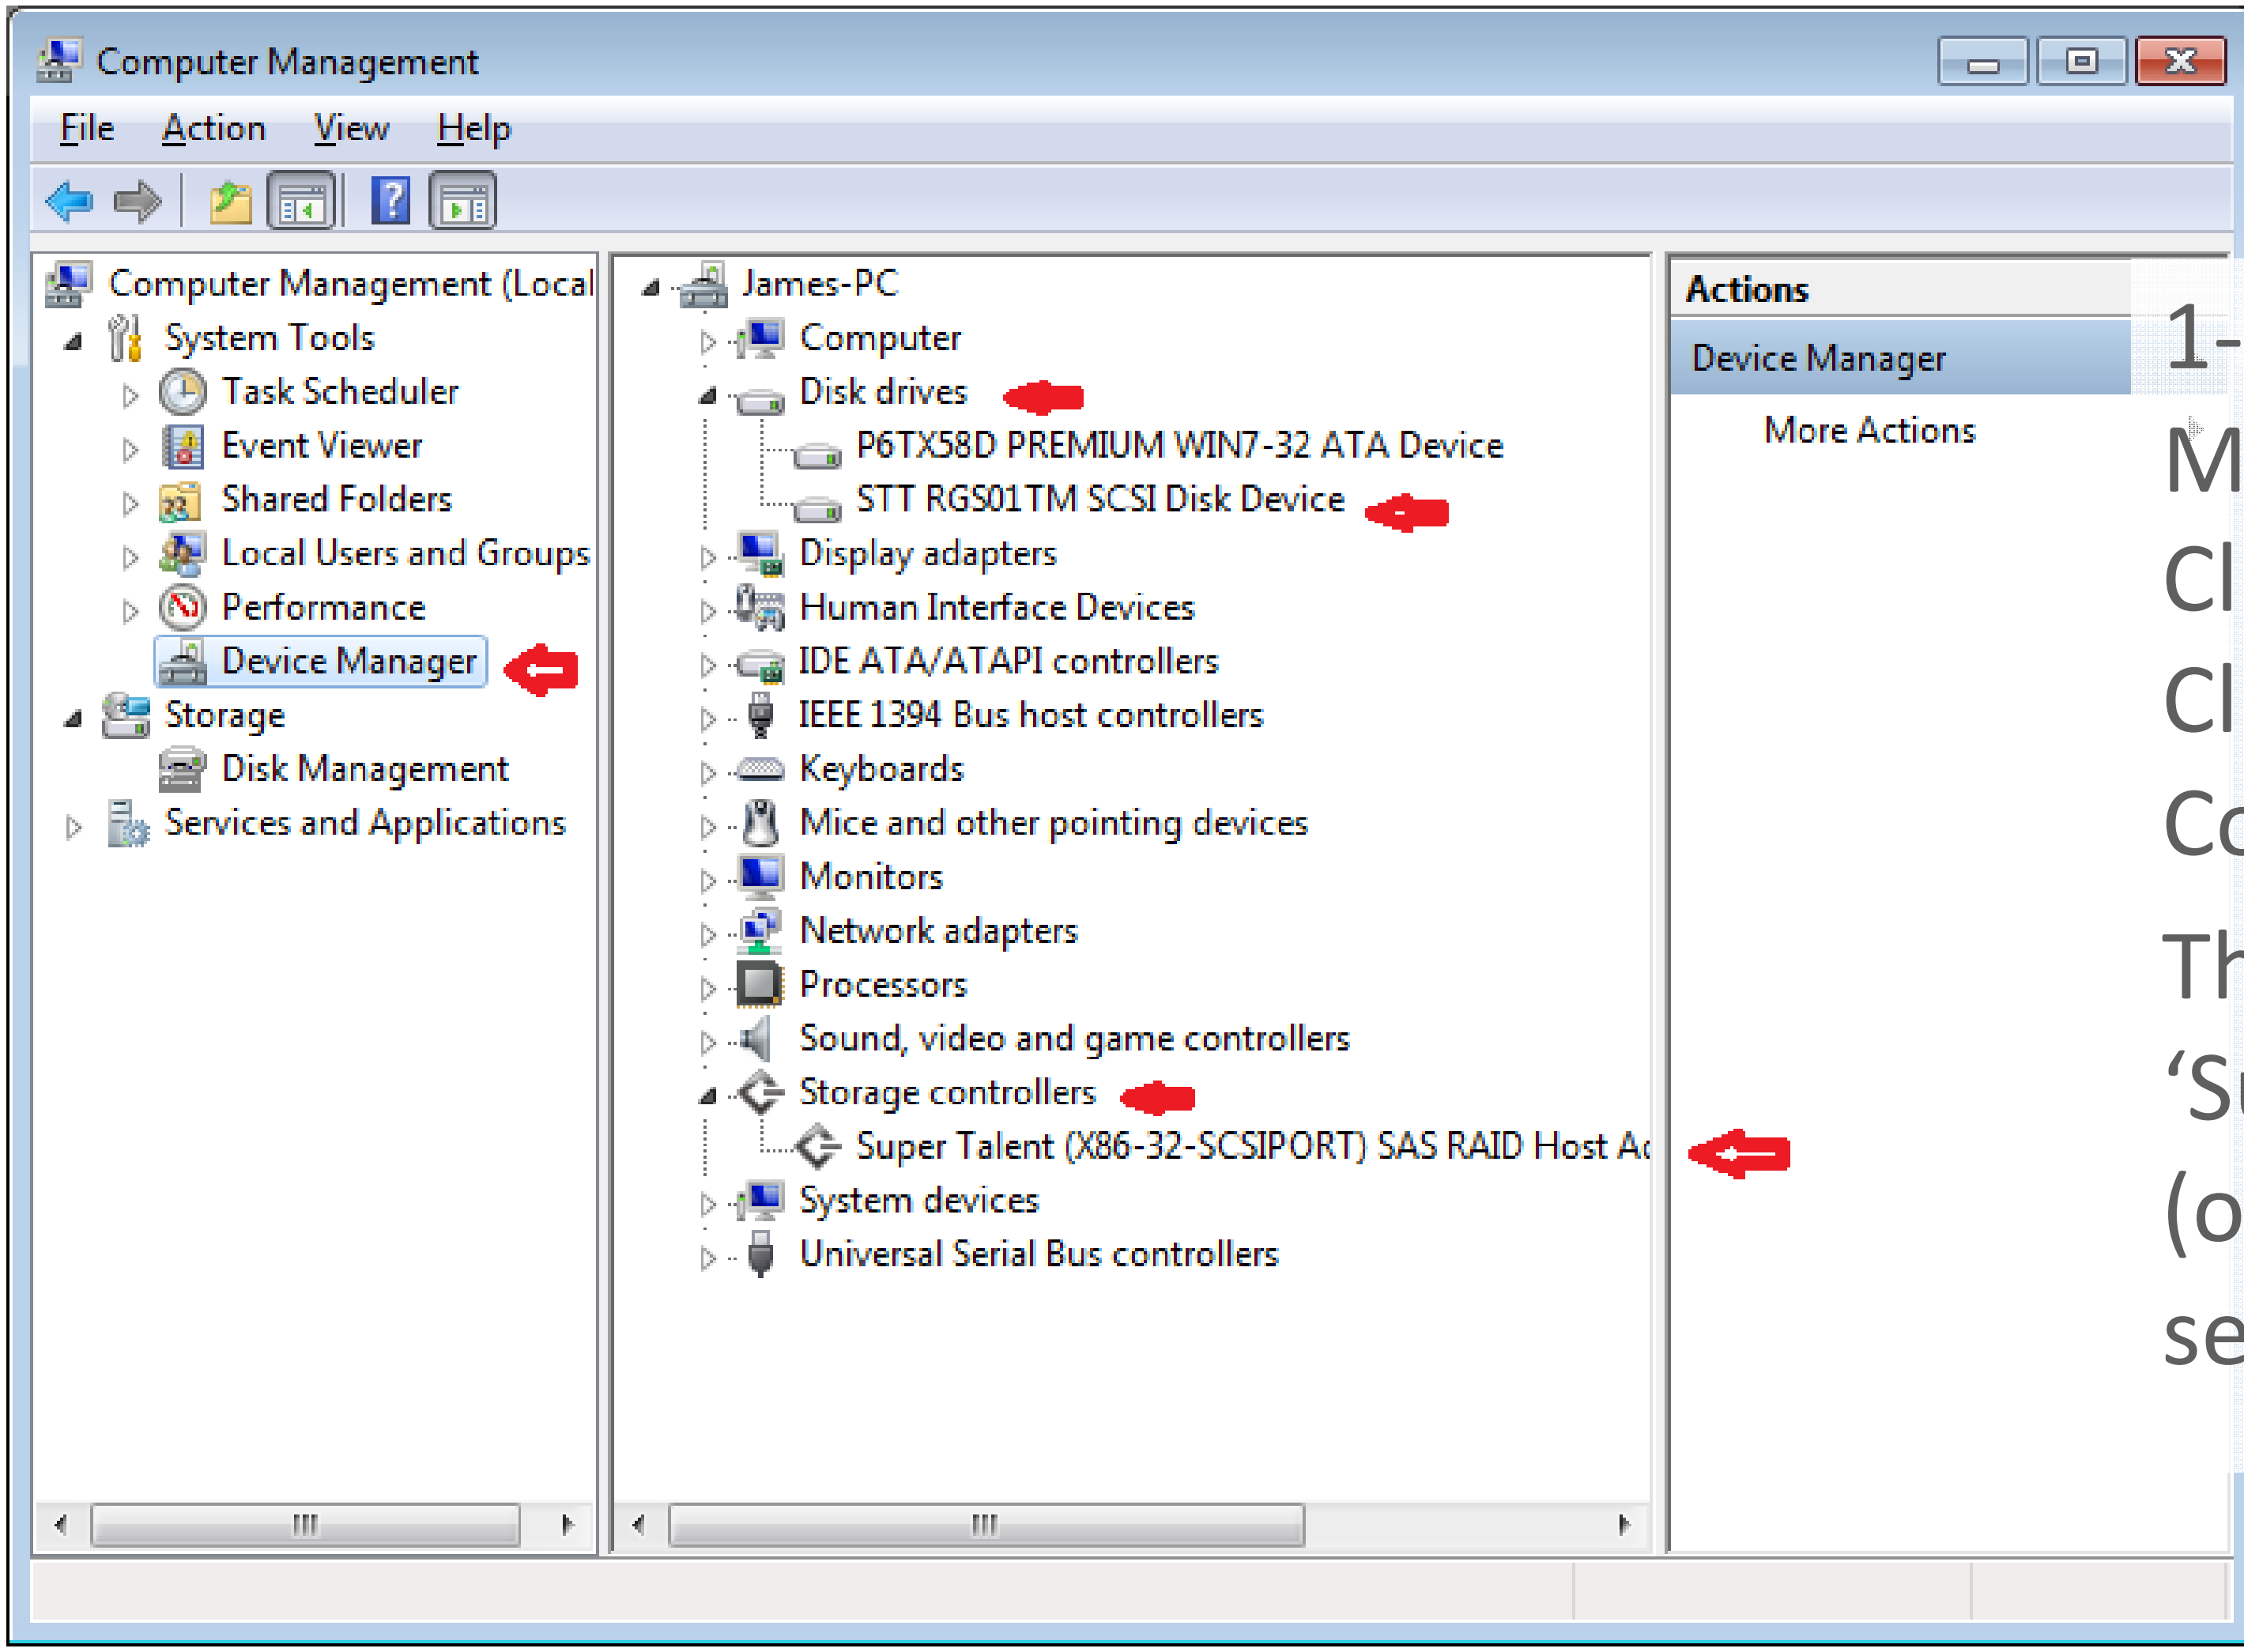


1-3. Click 'Device Manager', Click 'Disk Drives', Click 'Storage Controllers'

Then, right click 'Super Talent'… (or Areca…) and select 'Properties'.

1. Uninstall the old driver

1-4. Select Driver tap and

Click “Uninstall” button

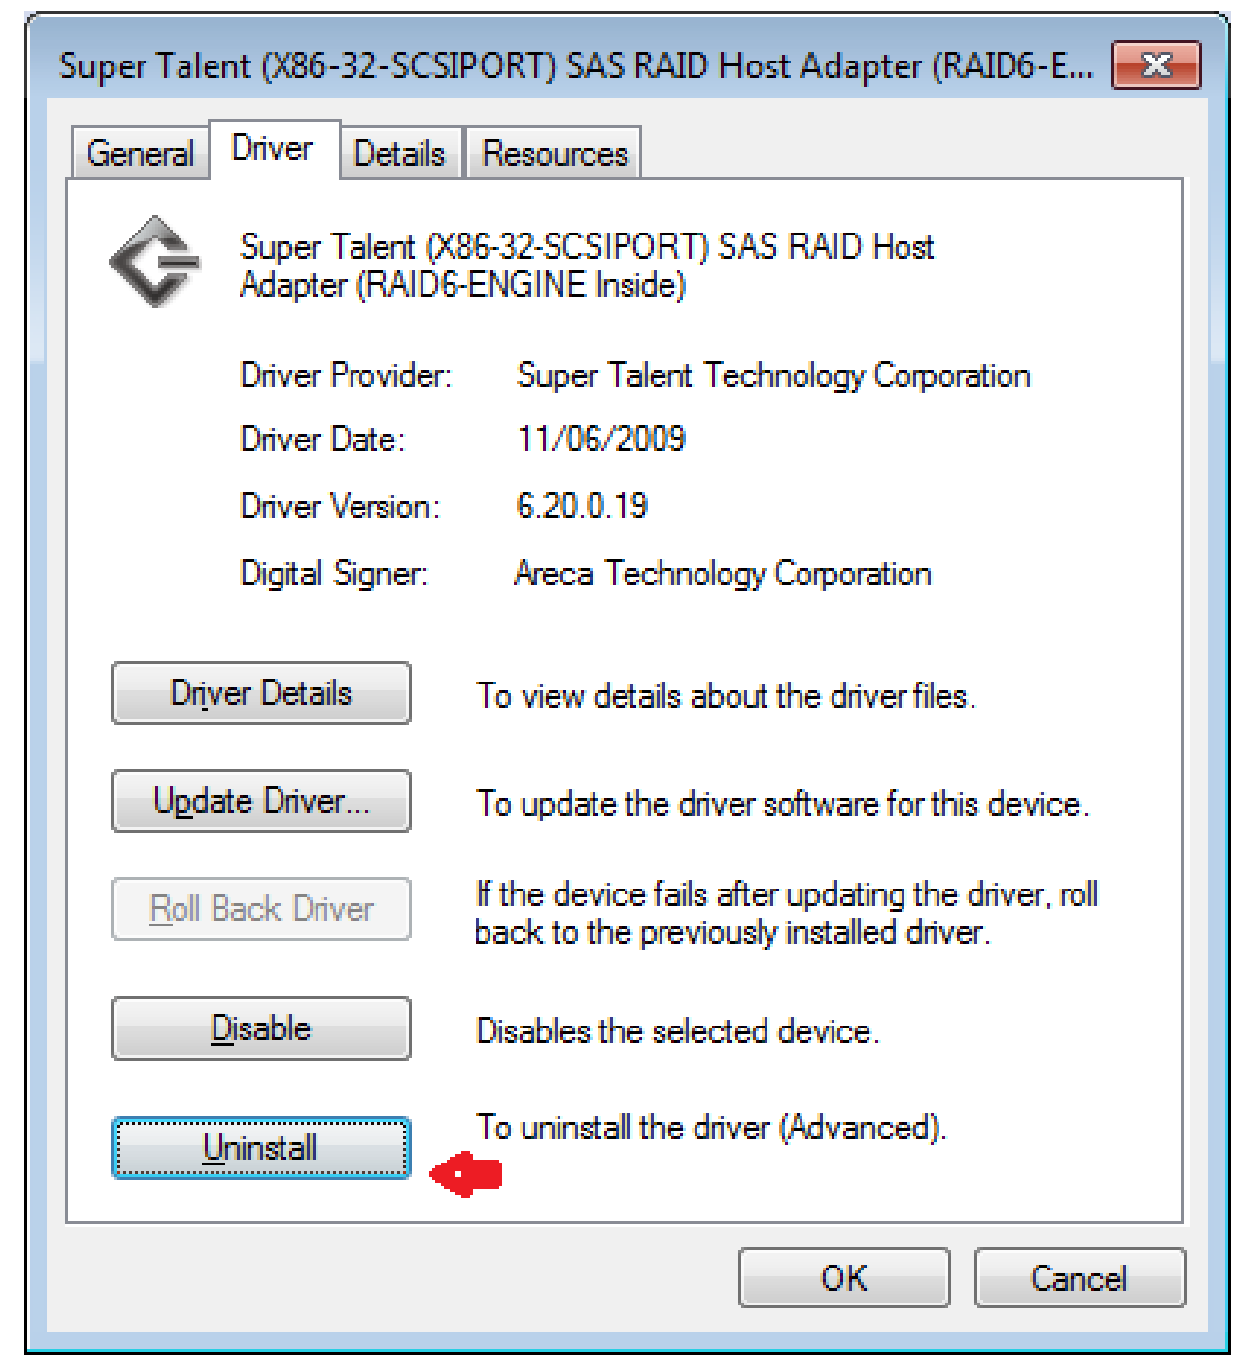


Check the box and click OK button.




1. Uninstall the old driver

1-5. Click Yes button to restart

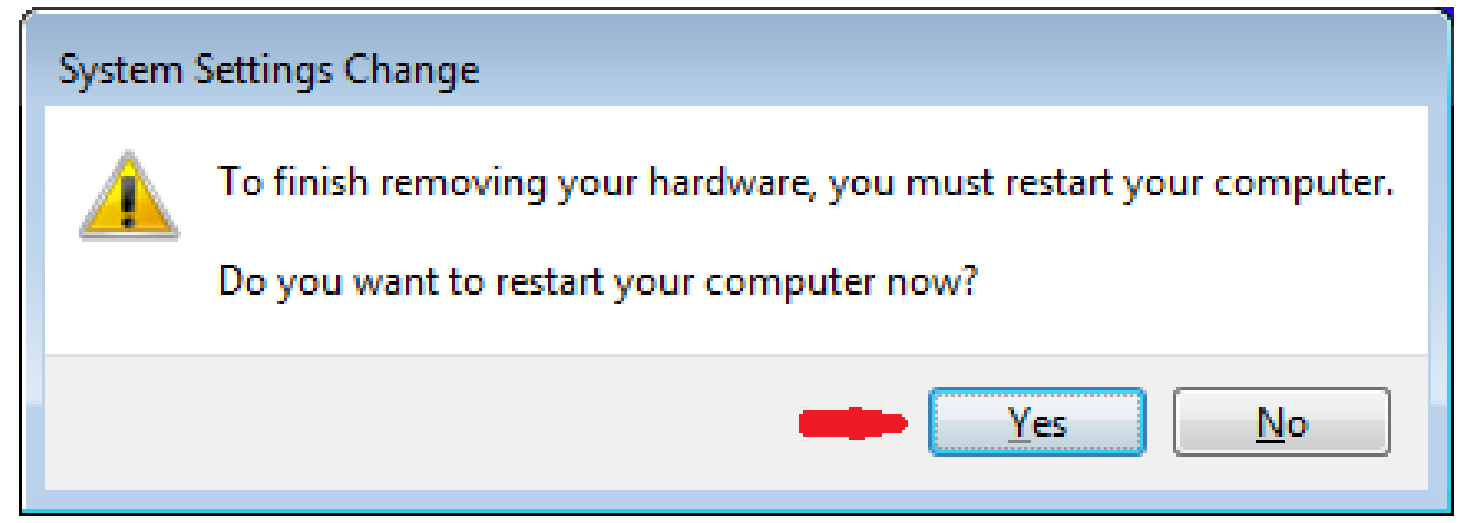


Check the Computer management again and right click STT…

Select Properties.

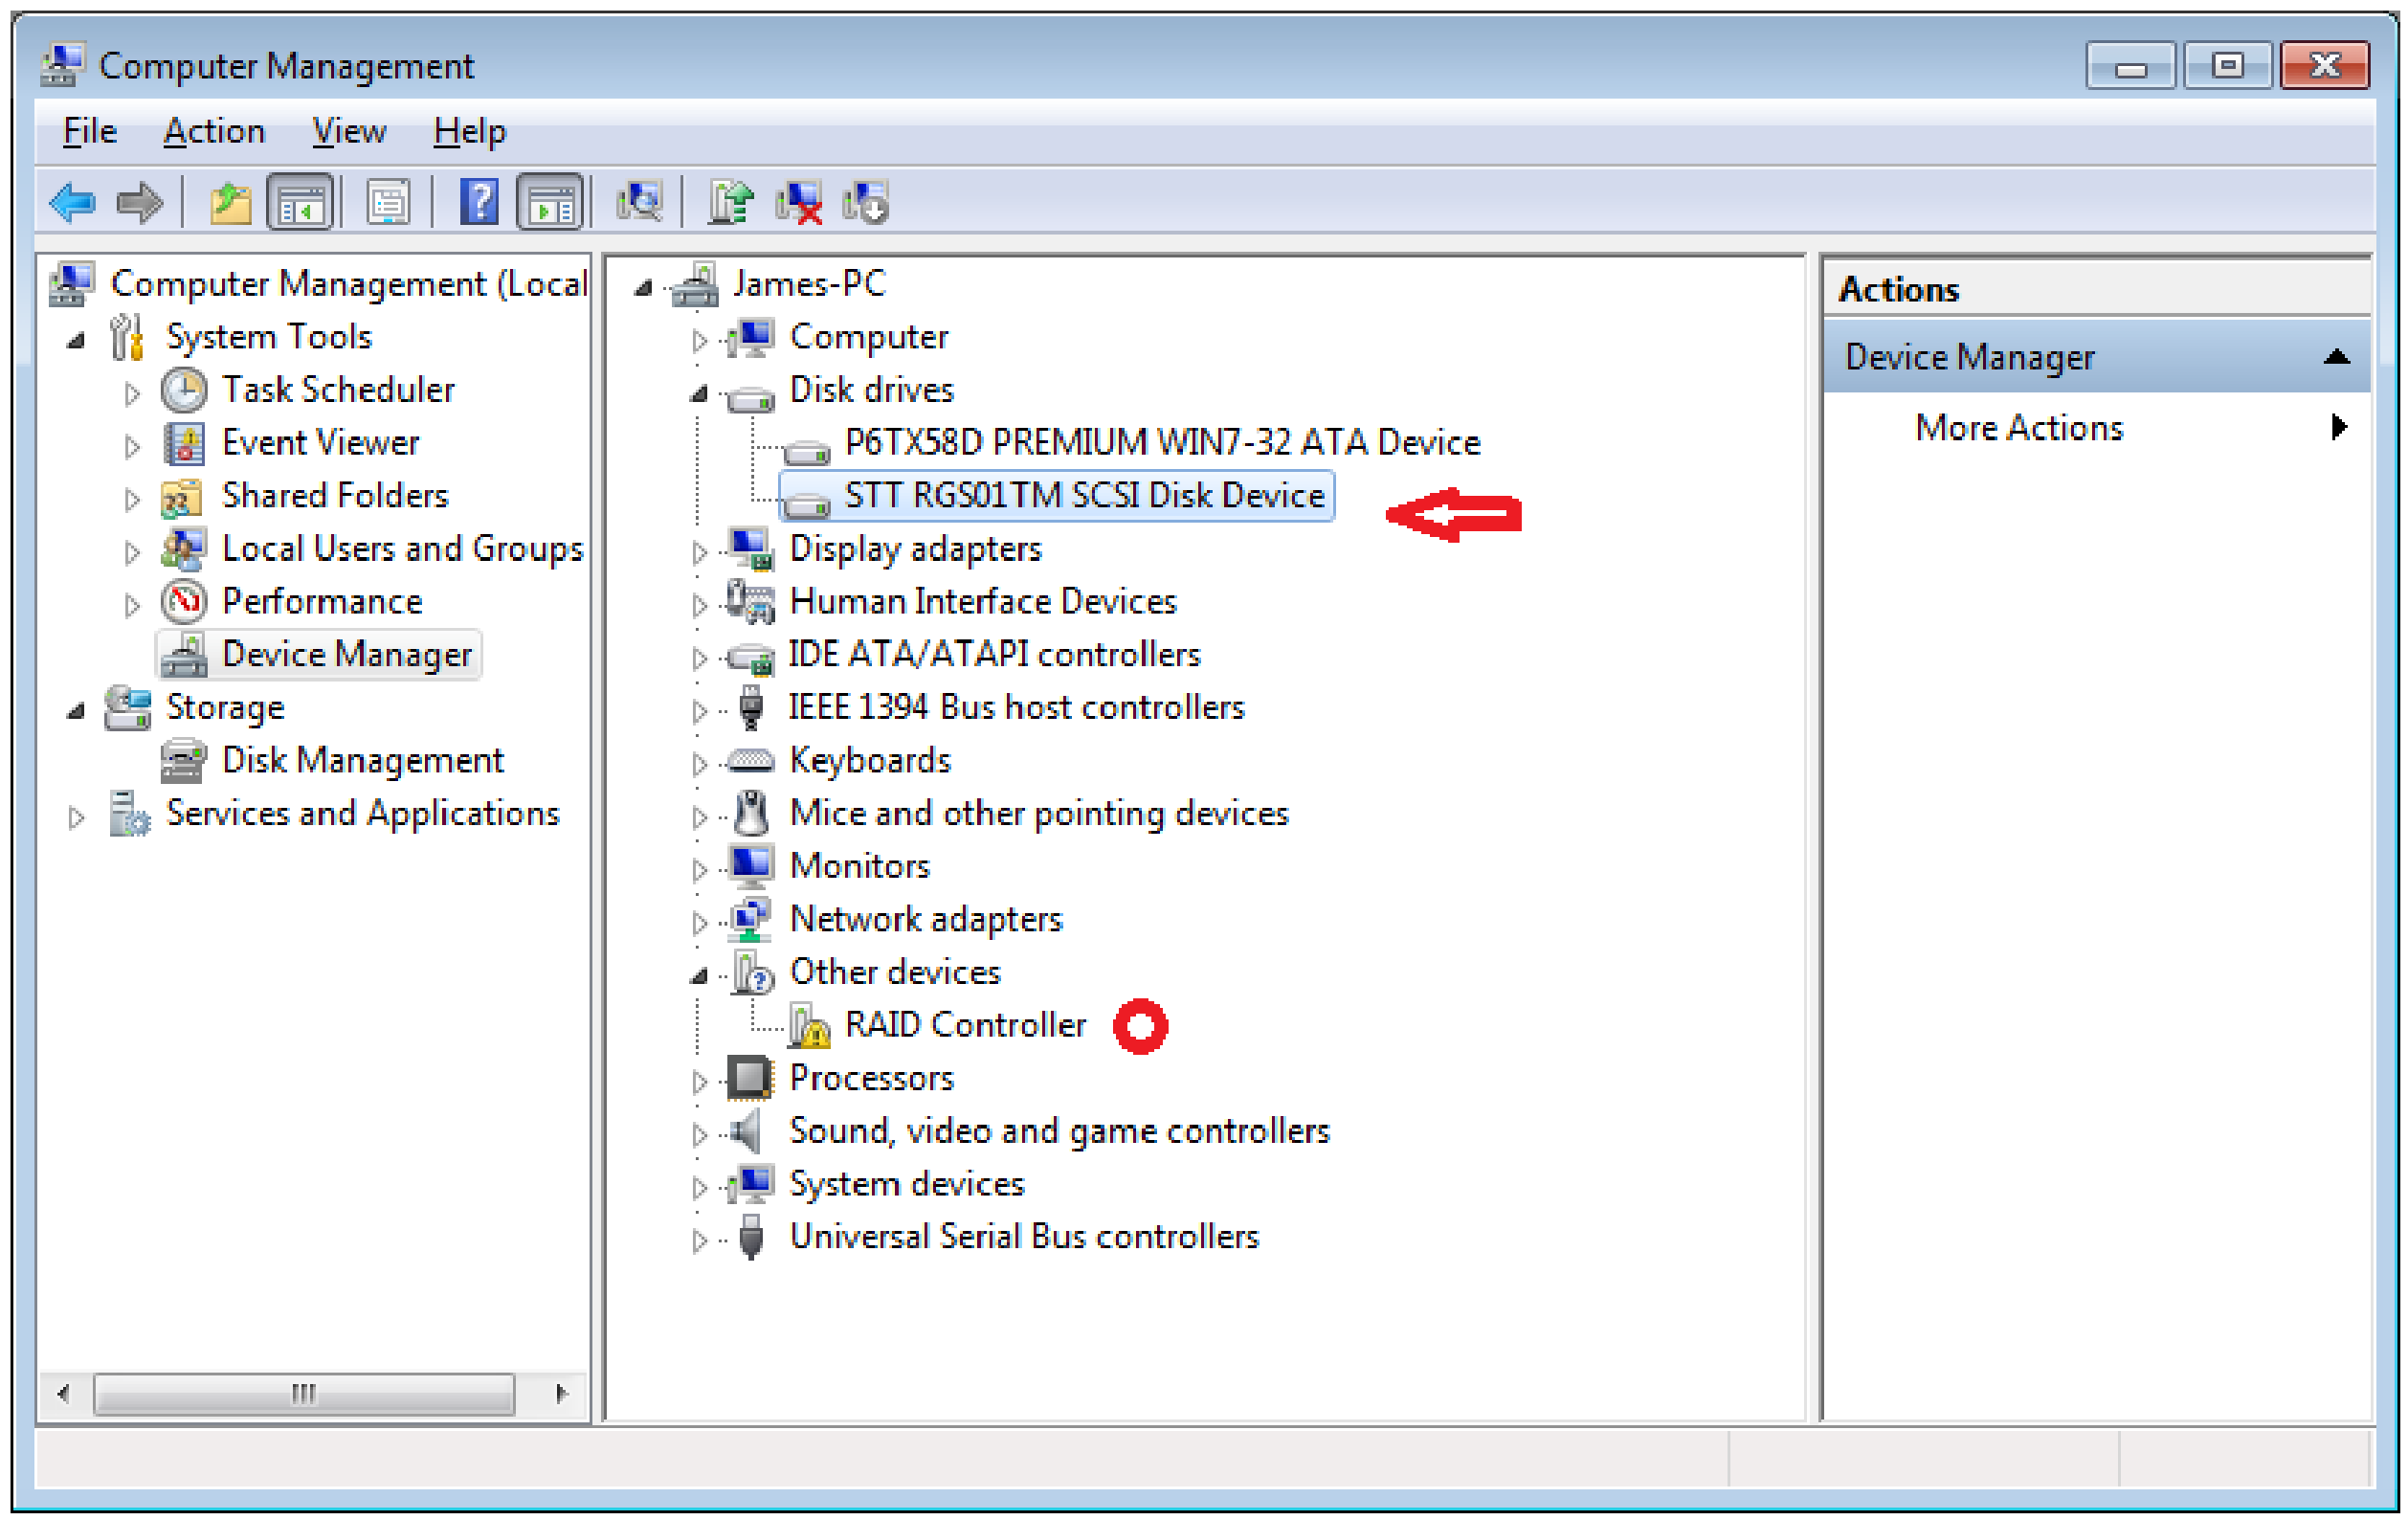

1. Uninstall the old driver

1-6. Select Driver tap and click “Uninstall” button.

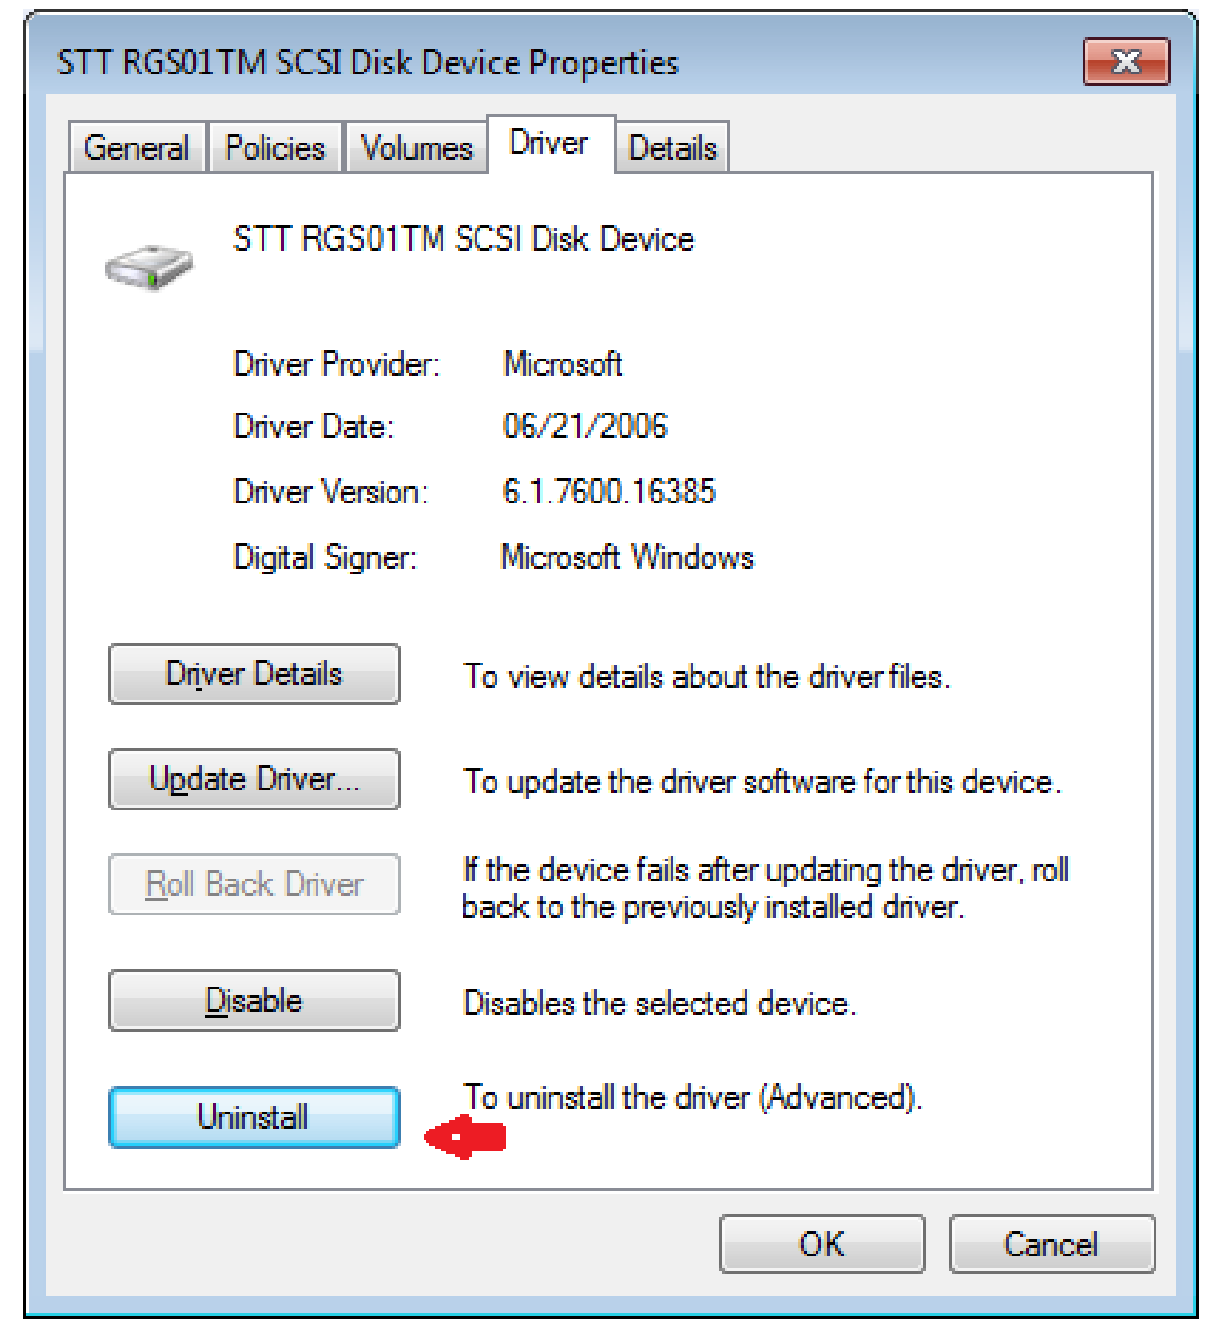


Click OK button



Restart the computer again.


2. Install the new driver

2-1. Now the RAIDDrive driver is fully uninstalled. Next, right click the RAID Controller and select 'Update driver software…'

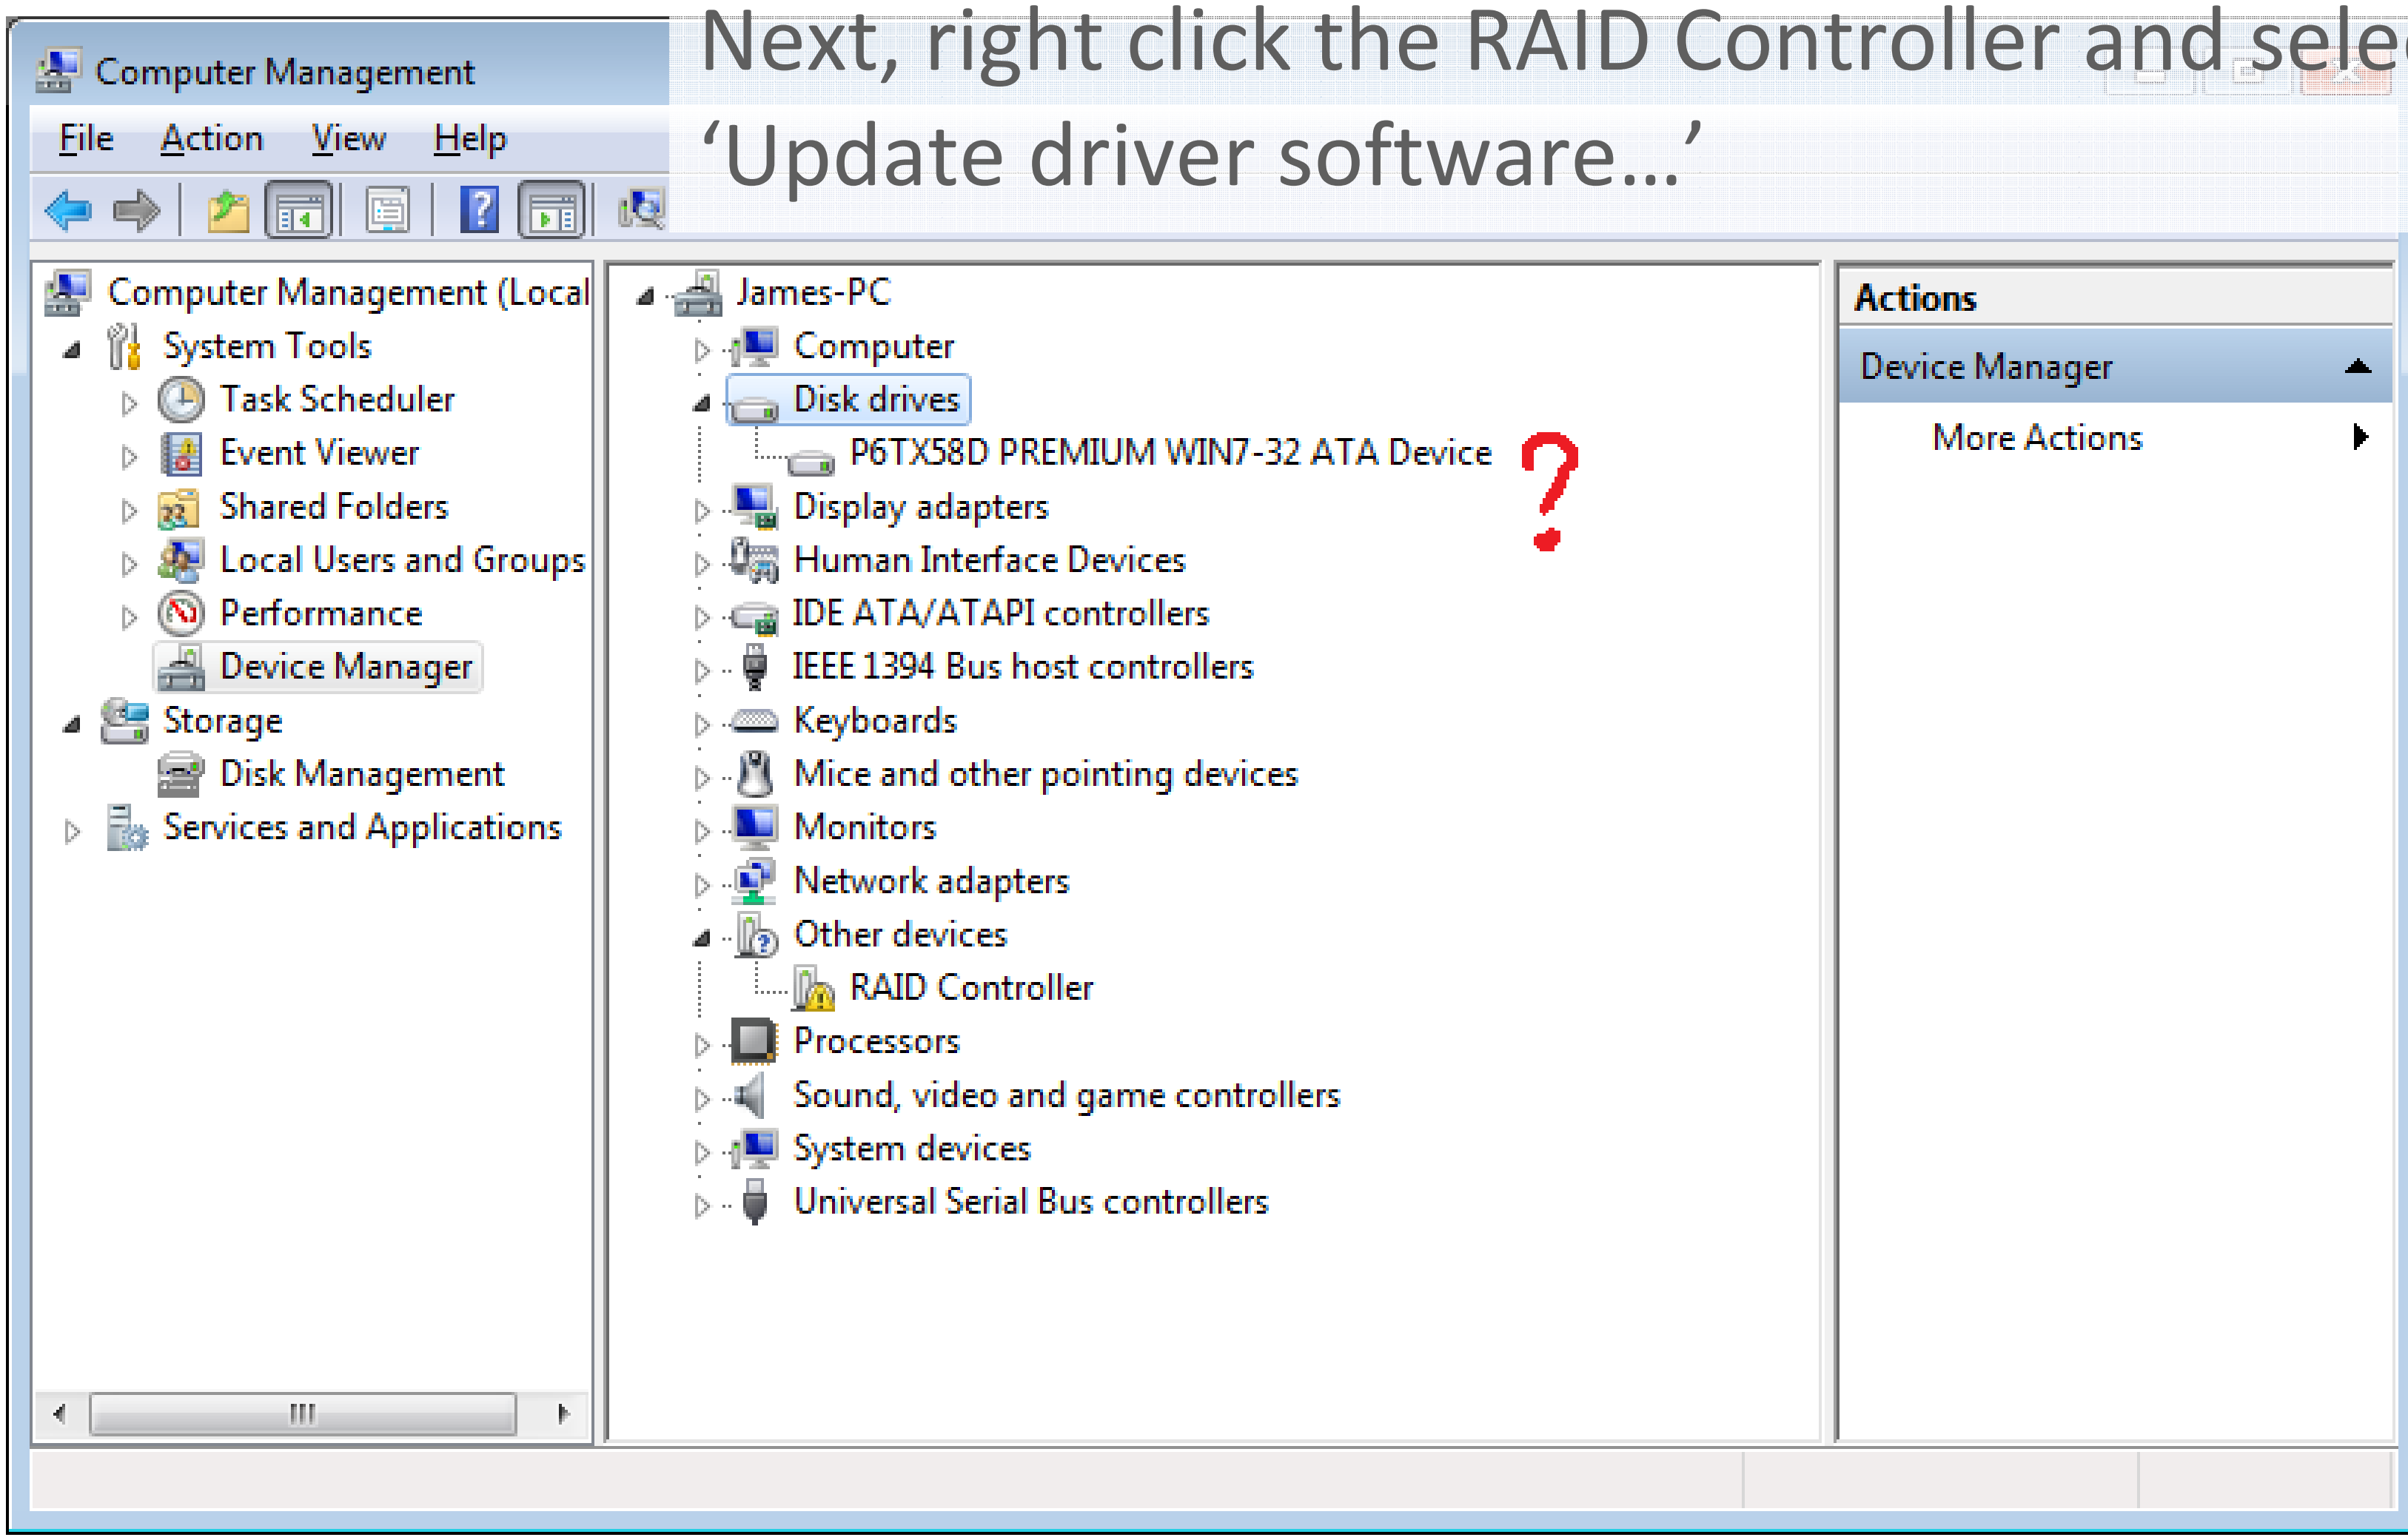


2. Install the new driver

2-2. Select 'Browse my computer'

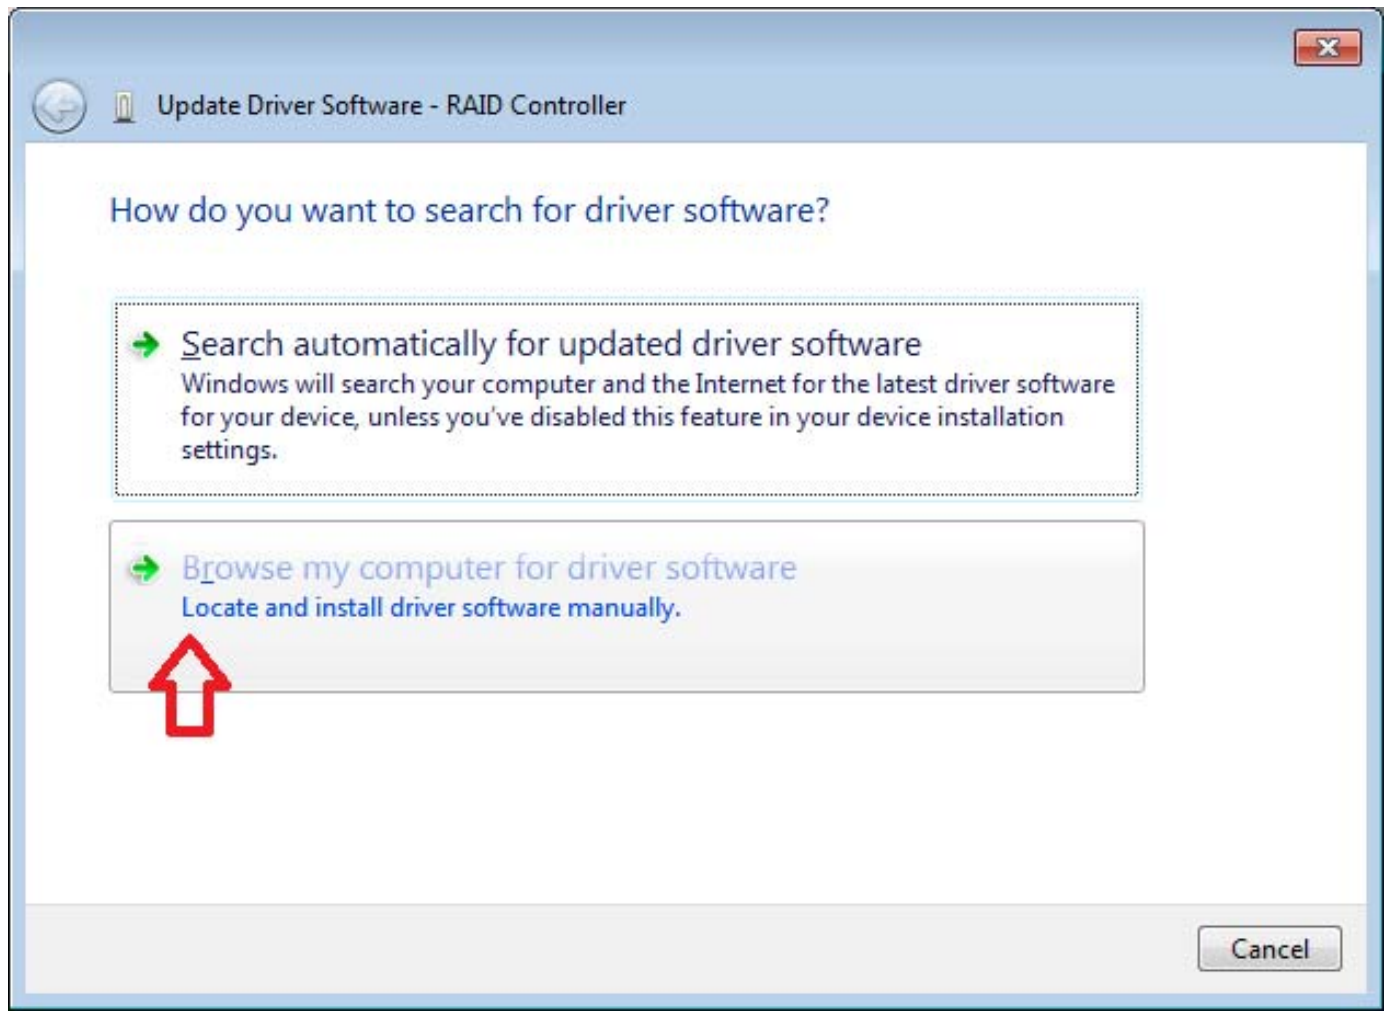

Check the 'Include Subfolders' box


Click 'Browse' to search for the new driver

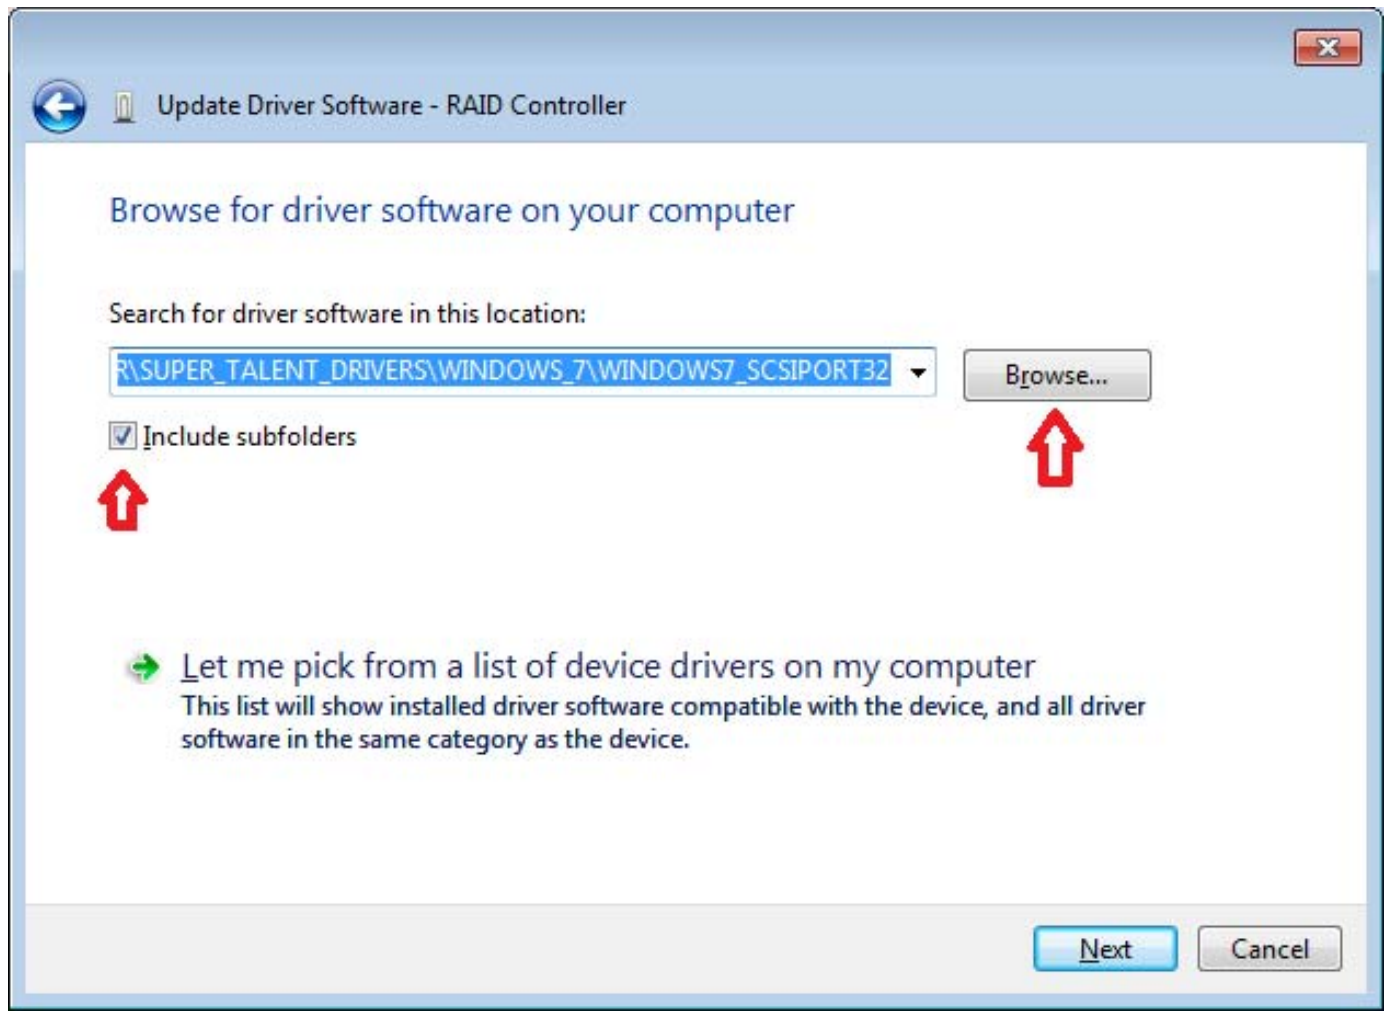


SUPER★TALENT®
THE BEST MEMORY

2. Install the new driver

2-3. Select the new driver which you downloaded from Super Talent website.

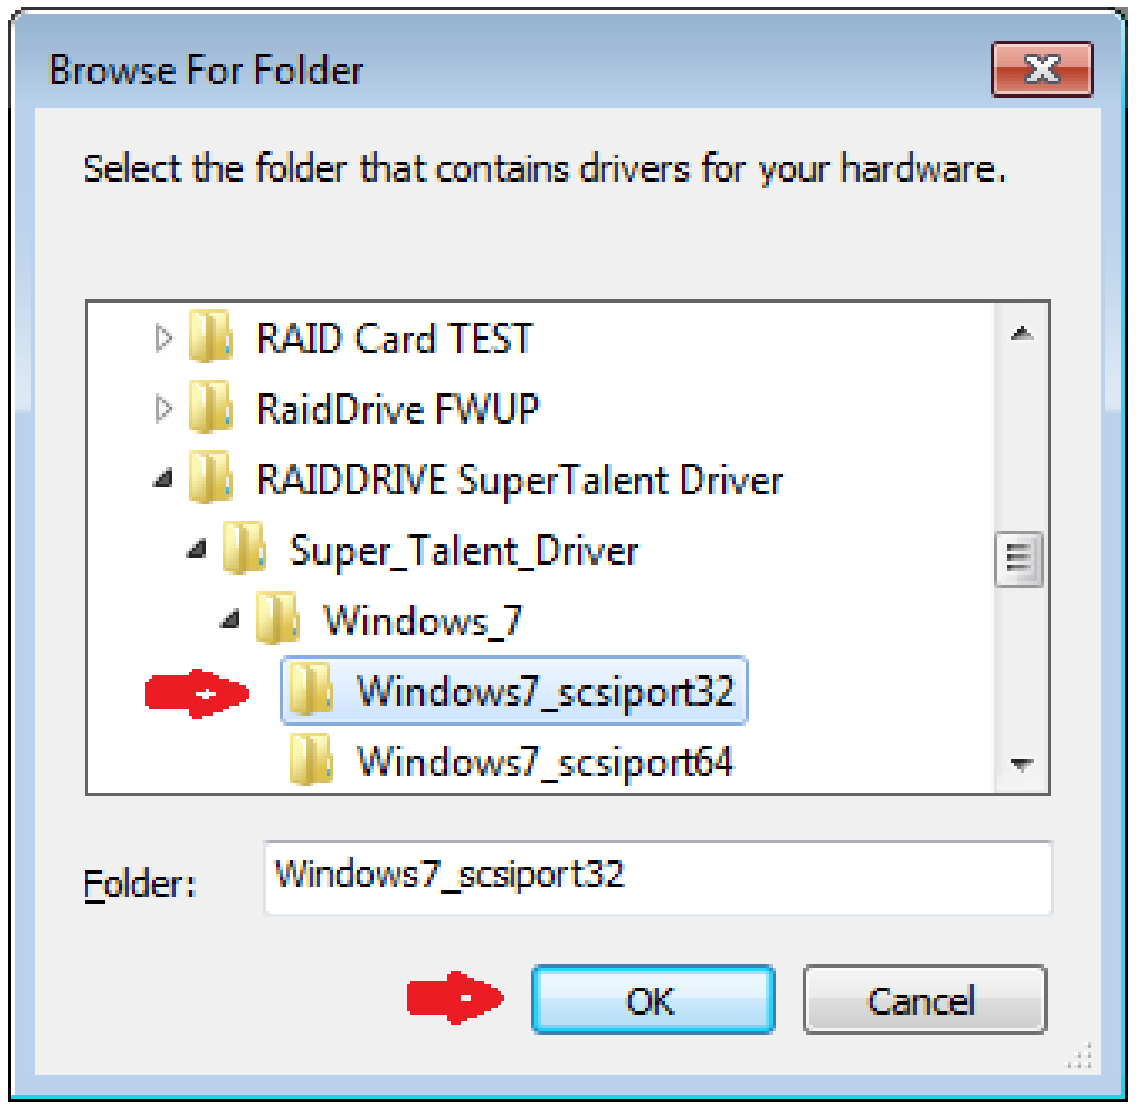

Click OK button.

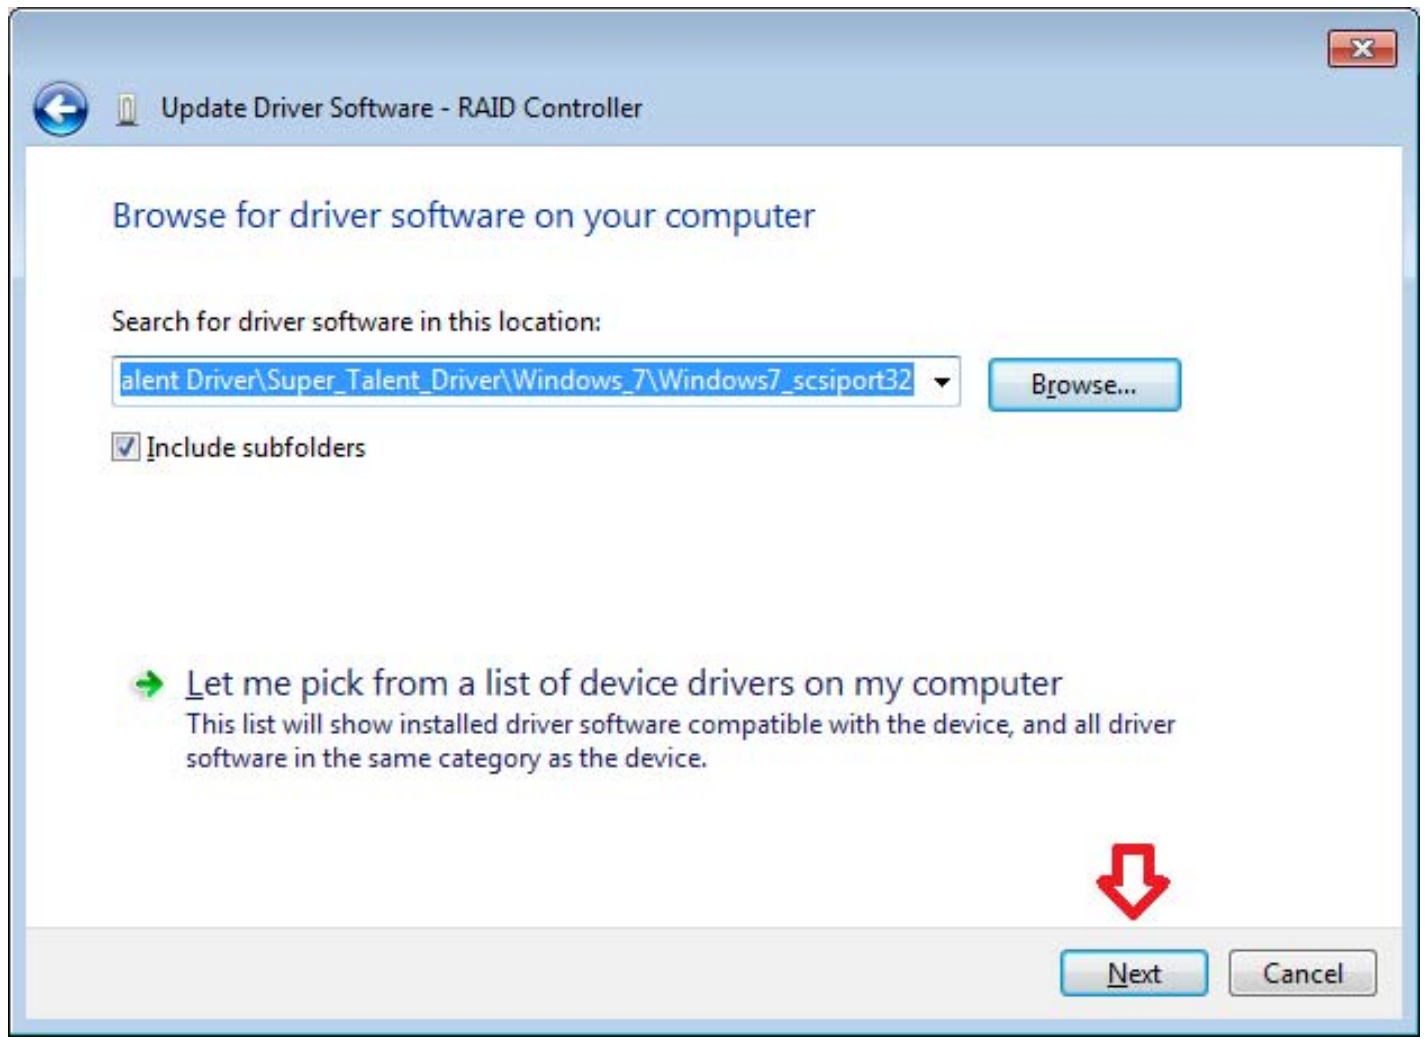


Click Next button.


2. Install the new driver

2-4. You now finished the driver installation process.

Click Close button.

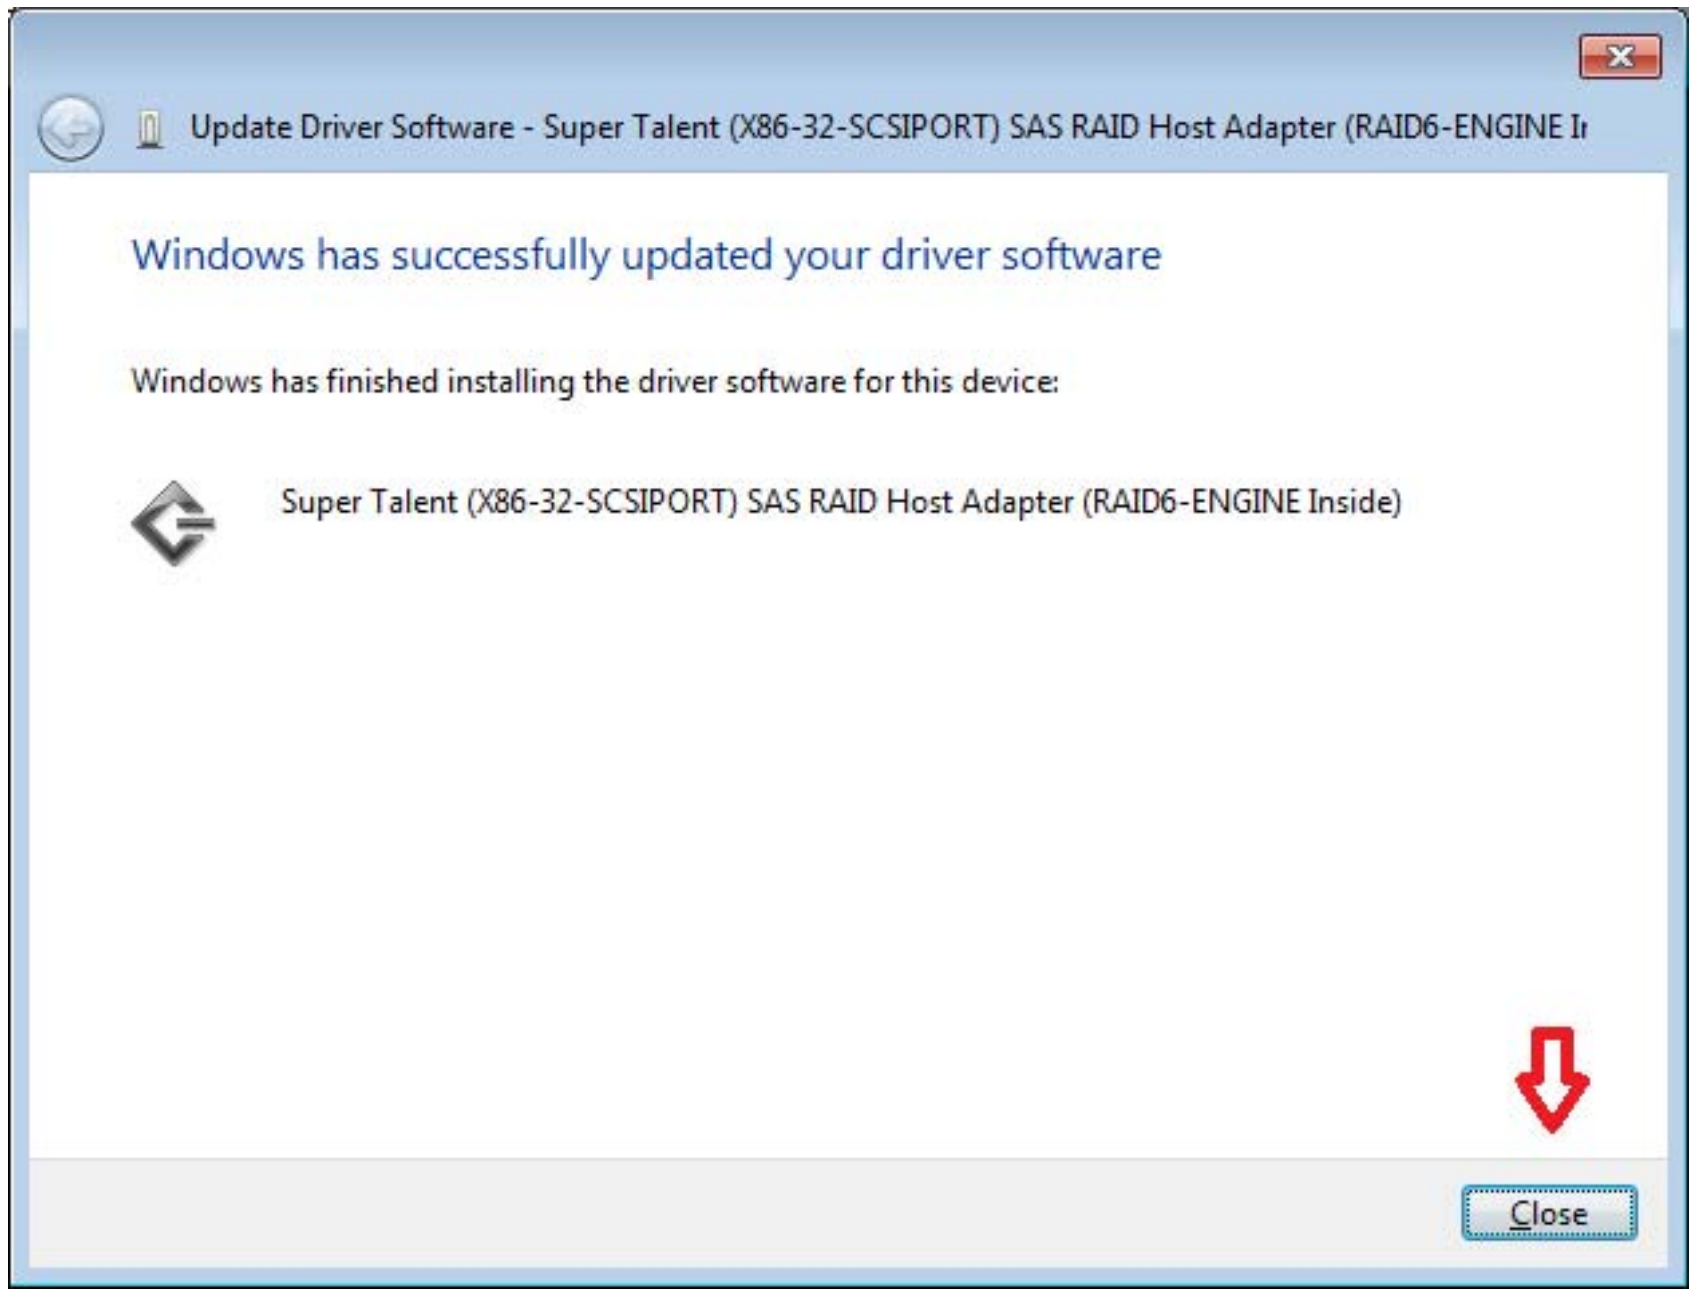

3. Verify the new driver

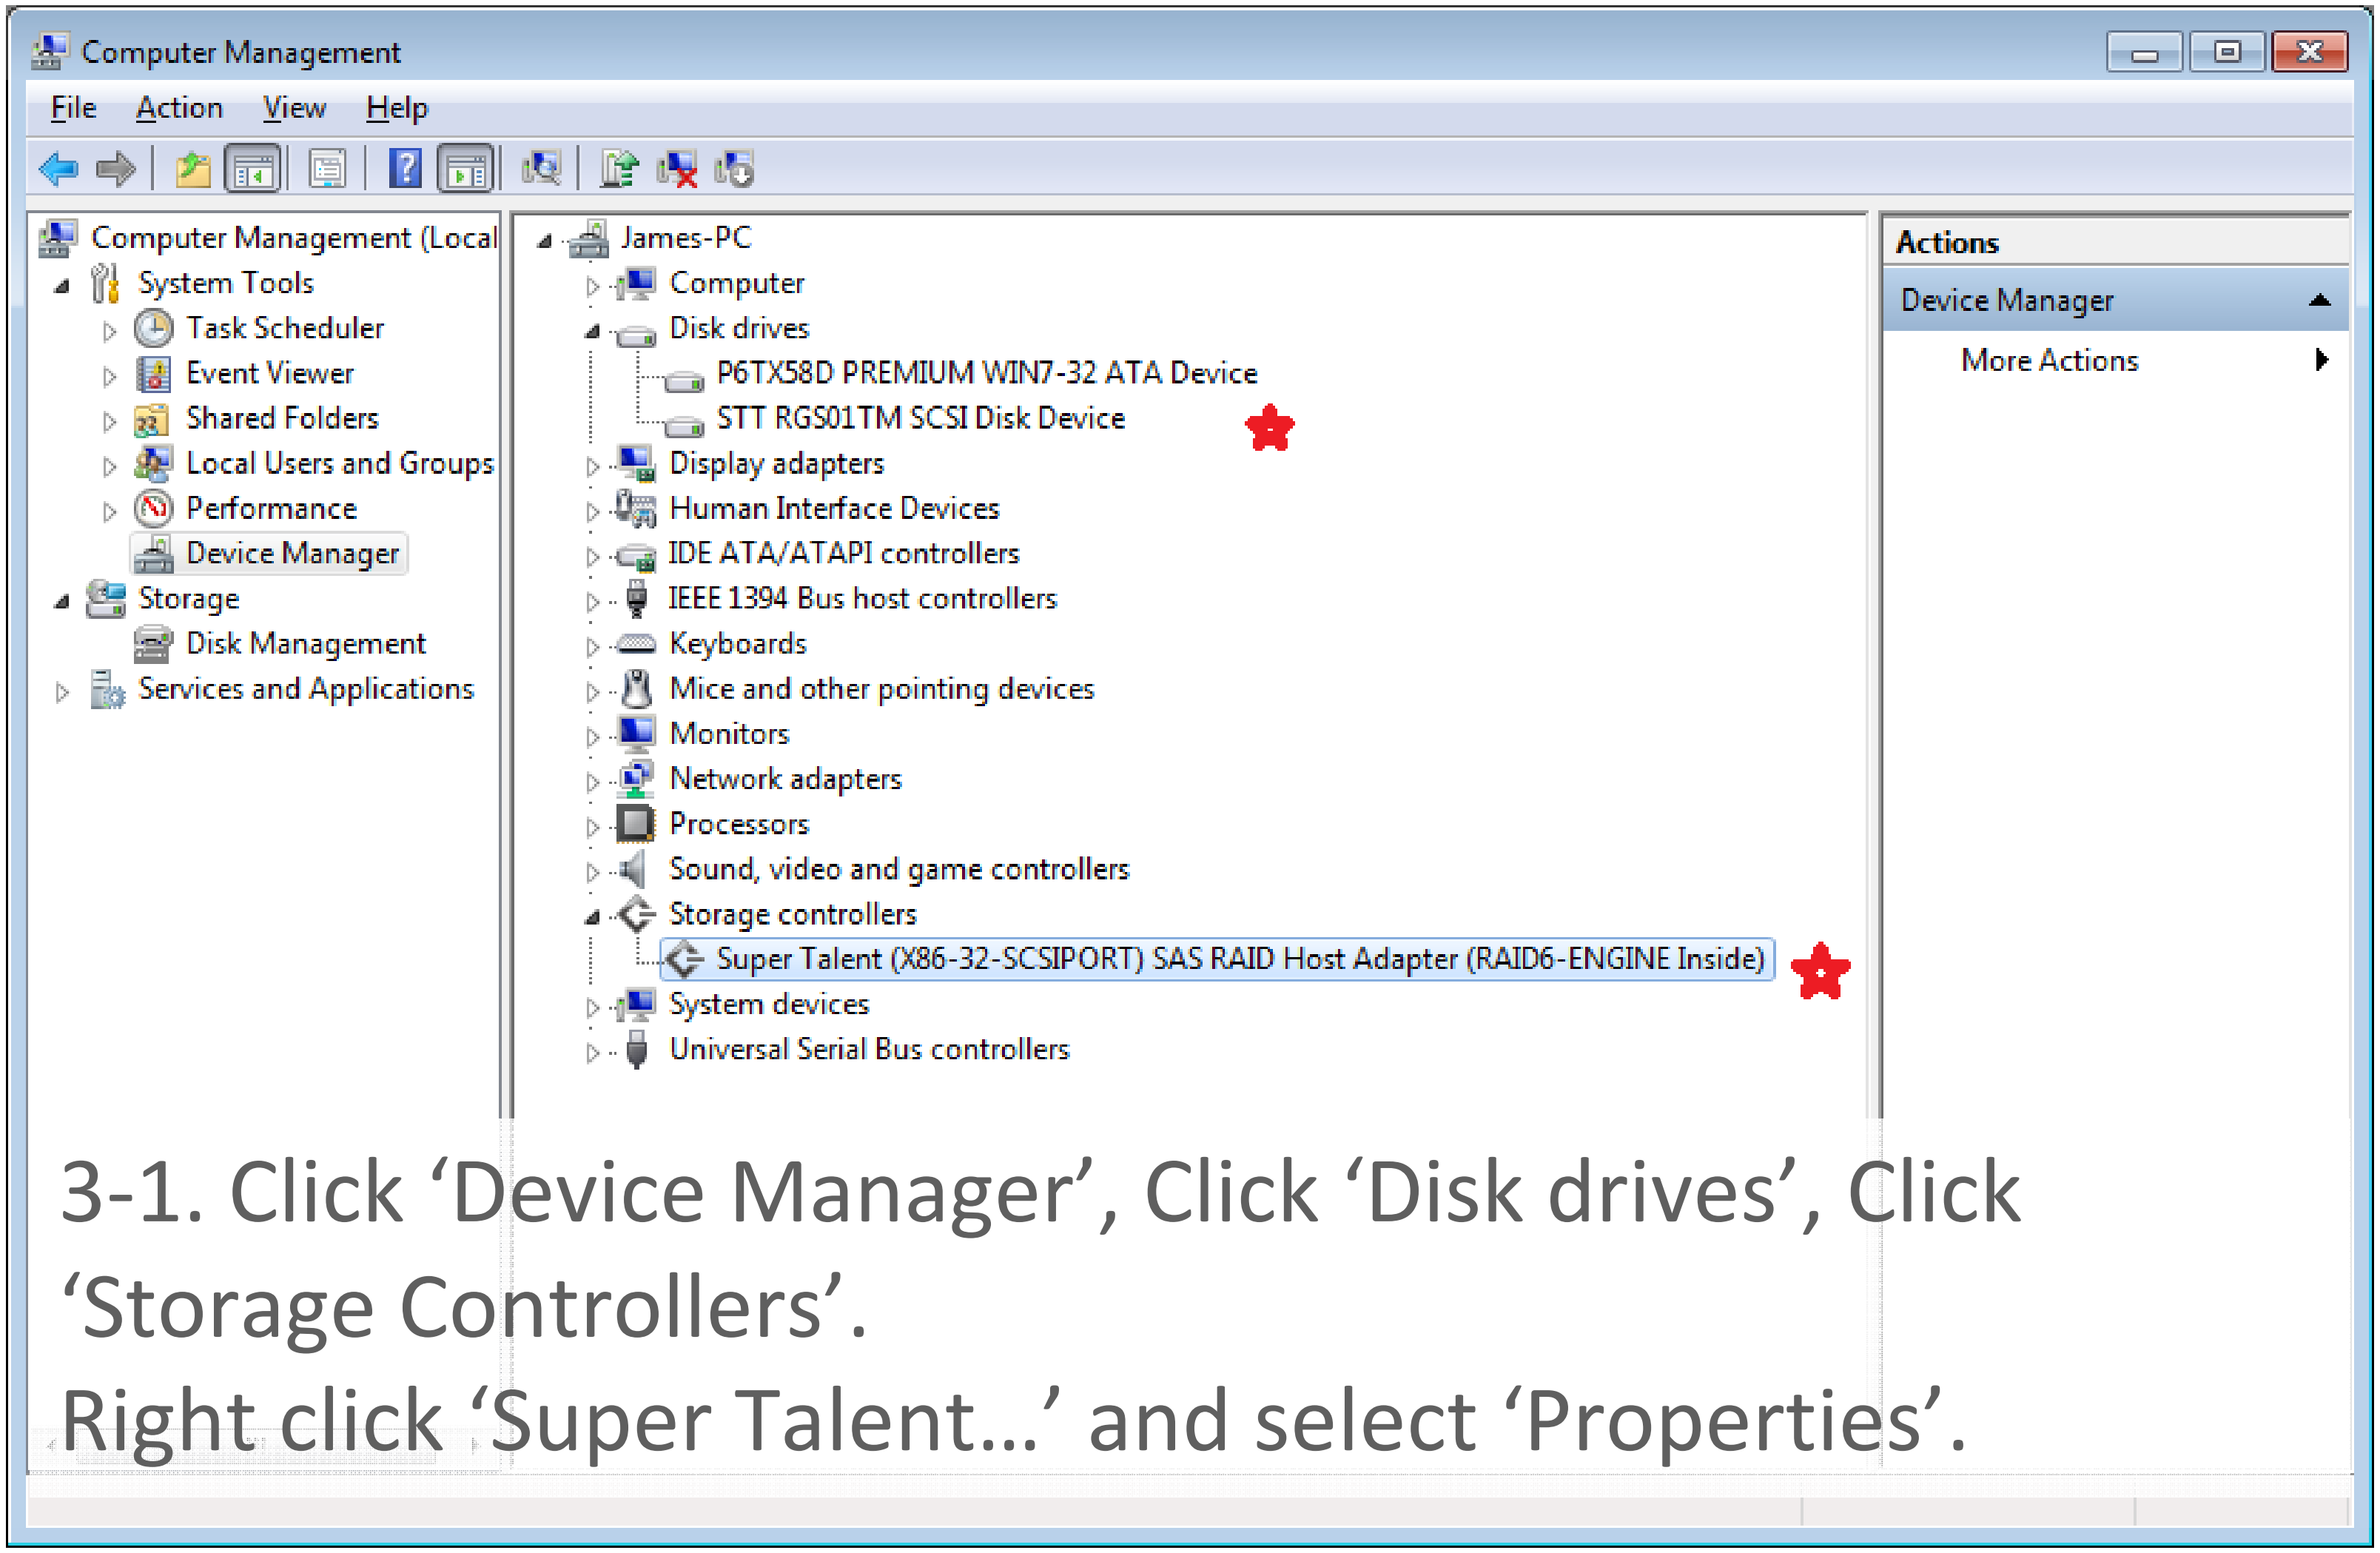

3-1. Click ‘Device Manager’, Click ‘Disk drives’, Click ‘Storage Controllers’.

Right click ‘Super Talent…’ and select ‘Properties’.


SUPER★TALENT®
THE BEST MEMORY

3. Verify the new driver

3-2. Select Driver tap and see the driver date.

3-3. Click OK to exit.

Enjoy the RAIDDrive performance!

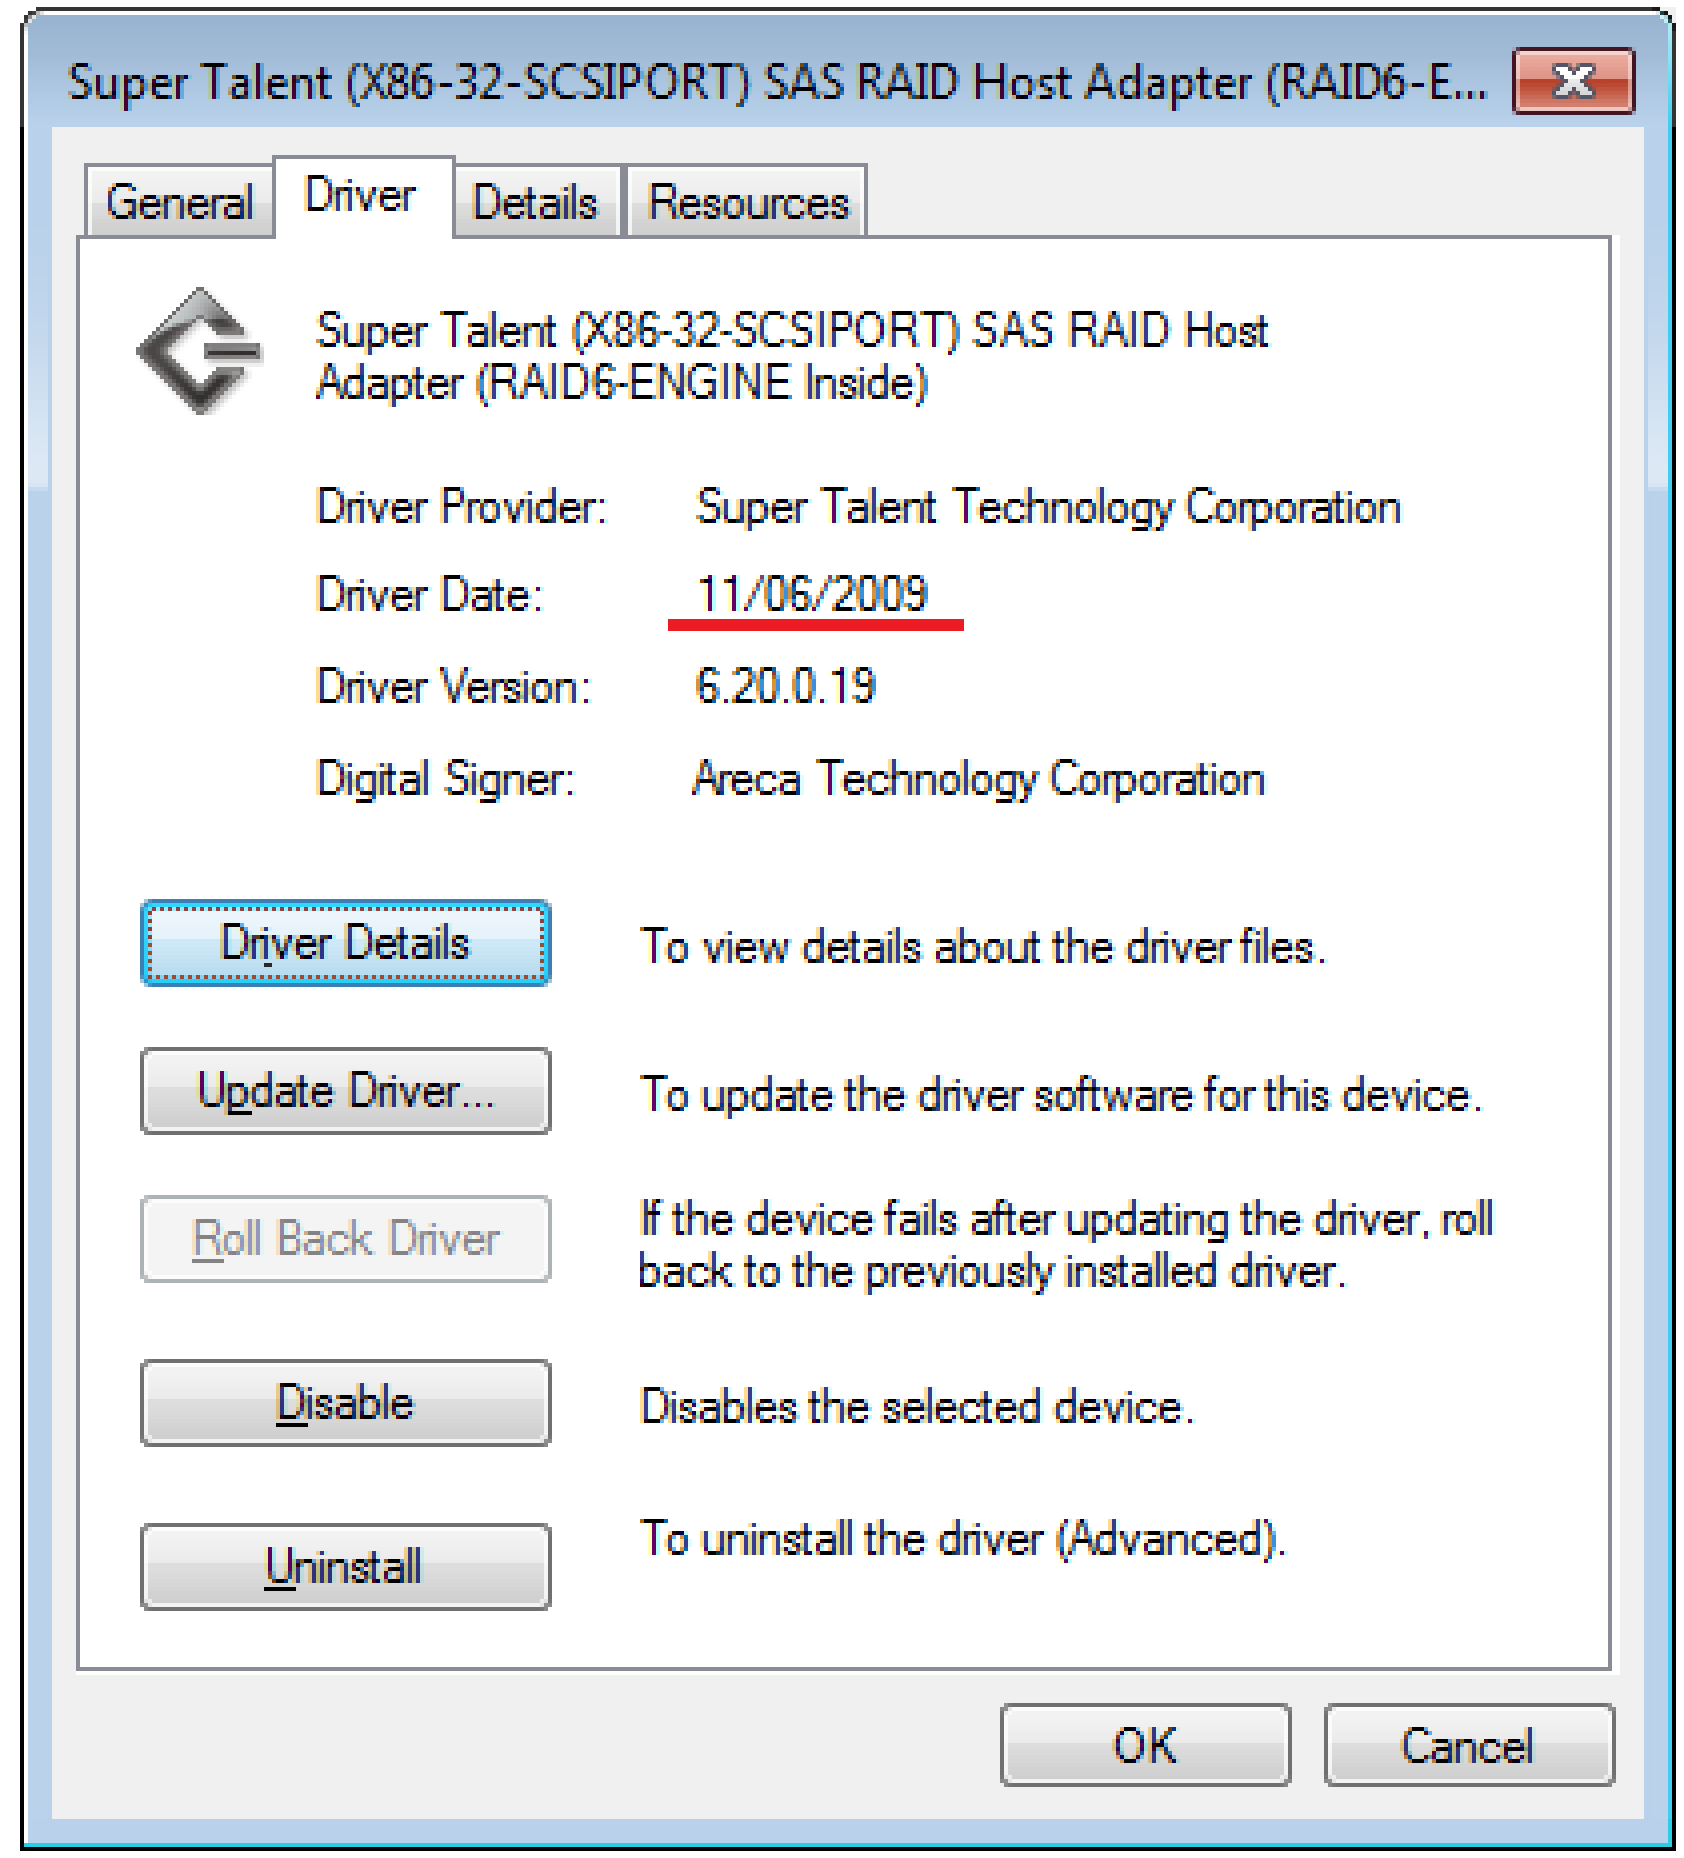

* * * * * * * * * *